


BF562-1 (24 V DC, 1.5 A) Installation Instructions

EN 54-4, EN 50131-6 Boxed Power Supply Unit (PSU)

WARNING: THIS PSU MUST BE INSTALLED AND MAINTAINED BY A SUITABLY SKILLED AND TECHNICALLY COMPETENT PERSON. THIS PSU IS A PIECE OF CLASS 1 PERMANENTLY CONNECTED EQUIPMENT AND MUST BE RELIABLY EARTHED.

The BF562-1 is a boxed mains input to regulated DC PSU, providing 1.5 A @ 24 Vd.c. nominal, designed for use with fire and security systems. Combining the functions of a PSU, battery charging unit and battery monitoring unit, it is fully compliant with EN 54-4 + A1 + A2, EN 62368-1 and has been built to comply electrically/environmentally with EN 50131-6 (Type A, up to Grade 4 #1, Environmental Class II). The PSU is an approved product by BRE and VdS. All wiring must be installed in accordance with all applicable national, regional or local standards. In the UK this is BS 7671 (IET Wiring Regulations). Fuses must comply with IEC/EN 60127-2. See Fig.1 for PSU connection details. The requirement for the mains supply to the PSU is fixed wiring ($\geq 1.0 \text{ mm}^2$, $< 2.5 \text{ mm}^2$), either using 3-core cable, or a suitable three conductor system fed from an isolating switched fused spur at 3 A, or a 6 A Type B circuit breaker to IEC/EN 60898-1. The mains supply must be exclusive to the PSU and be reliably earthed at the indicated earthing point. *HINT: As an alternative to a switched fused spur, a double-pole isolating switch with 3 mm air gaps on the contacts & switching L & N only, may be used in the mains feed from the Main Distribution Board to the PSU, providing it meets the appropriate wiring regulations.*

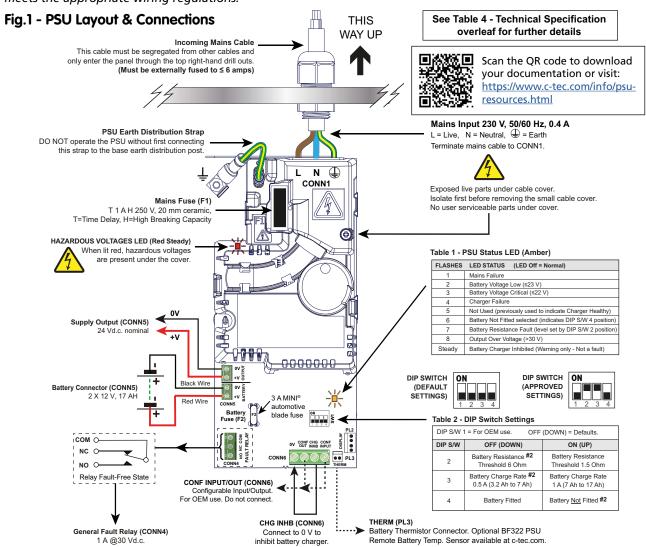

Note: On a standard 'as-supplied' unit, DIP Switch 4 is OFF (DOWN) and a fault will occur on initial power-up if fully charged batteries are NOT connected. See Table 2 - DIP Switch Settings (Fig.1).

Over Current / Over Load Protection: If the output load attempts to pull current in excess of the PSU rating, the PSU will shut-down and attempt to auto-recover after approx. 10 seconds, and will continue to do so until the overload is removed. If the PSU is subjected to a short circuit across the output terminals, the PSU may trip and require power cycling to reset. Reset by switching off mains and disconnecting the batteries, then wait for the red 'Hazardous Voltage Present' LED to extinguish before re-applying mains and batteries. Check the battery fuse (F2) has not operated.

WARNING: There is a risk of explosion if an incorrect battery type or size is used. Always dispose of used batteries in accordance with the battery manufacturers instructions and local regulations. Batteries are heavy and can produce dangerously high currents if shorted. Take care when handling and routing battery leads to avoid damage.

FIRE ALARM
ancillariesApproved Document No. DFU0056210 Rev 701/06/22#1Additional tamper protection required#2Non-certified setting



Important Note about Batteries: This PSU complies with EN 54-4 and therefore must monitor and report battery resistance faults when batteries are fitted. The battery resistance fault threshold is directly related to the ability of the batteries to deliver the rated current to the load.

VRLA battery resistance varies with manufacturer quality, battery age (from date of manufacture, particularly if left uncharged during shipping or storage), temperature, size and state of charge. It is not uncommon for so called "new" batteries to be in excess of six months old if the supply chain is not properly managed. It is therefore important to fit

good quality, new batteries that have not been shelf soiled during shipment or storage. VRLA battery resistance naturally increases in cold environments and may make marginally usable batteries at room temperature unusable at low temperatures. Careful siting of the product may alleviate some of the natural limitations of VRLA batteries. Smaller batteries have a higher resistance than larger batteries as shown in Table 3 right.

Table 3 - Battery Resistance

VRLA Battery	Typical Battery Resistance (single battery x2 for 24 V systems)		
12 V, 2 Ah	280 mΩ		
12 V, 3.2 Ah	100 mΩ		
12 V, 7 Ah	85 mΩ		
12 V, 17 Ah	65 mΩ		
12 V, 38 Ah	58 mΩ		
	Battery 12 V, 2 Ah 12 V, 3.2 Ah 12 V, 7 Ah 12 V, 17 Ah		

VRLA battery life is typically rated at 20°C. Raising the temperature by 10°C will halve the expected usable life of a VRLA battery. Operating at 40°C will therefore lead to only a quarter of the expected life. High temperature also degrades battery life during shipping and storage.

	ON: BF562-1 (24 V 🛛					
Mains supply voltage (a.c.):			ted current: 0.4 A r.m.s.			
Maximum output current:		1.5 A (battery charger disabled)				
Output current / power rating:		1 A continuous 'I max a' if DIP Switch 3 OFF (DOWN) ^{#2} 0.5 A continuous 'I max a' if DIP Switch 3 ON (UP) Taking a load current greater than 'Imax a' will temporarily reduce the battery charge current 1.5 A 'I max b', battery charger turned off via CONN6				
		'I min' = 0 mA				
Output voltage:		20 V ('V min') to 30 V ('V max') ± 2% <200 mV ripple pk-pk				
Battery characteristics:		Discharge cut-off: 21 V ± 2% Float charge voltage: 27.3 V ± 1% @ 20°C Battery temp. compensation: -36 mV / °K				
Maximum approved VRLA battery size:		Up to 2 x 17 Ah				
Battery charge capacity (C):			oattery charged to 80% of	capacity in 24 hrs)		
Maximum internal battery re	Maximum internal battery resistance 'Ri max':		F (DOWN) #2	1.5 Ω if DIP Switch 2 ON (UP)		
CONNECTIONS						
Mains Input (CONN1):	Mains supply inpu	it terminals: Live, Neut	ral & Earth. 1 mm ² to 2.5 m	m² cable size.		
Supply Output (CONN5):	Output for auxilia	ary equipment. 1 mm ² o	able size, <30 m cable leng	th (screened cable must be used).		
Battery Connector (CONN5):	Connection to the VRLA batteries. 1 mm ² cable size.					
Fault Relay (CONN4):	CONN4 should not be used for compliance with EN 50131-6, PL2 provides serial data for all fault signals.					
Battery Charge Inhibit (CONN6)	y Charge Inhibit (CONN6): Connect to 0 V to inhibit battery charger. 1 mm ² cable size.					
CONF Input / Output (CONN6):						
PL2:			nal BF423 configurator tool available at <u>c-tec.com</u> .			
PL3:	Battery Thermistor Connector. Optional BF322 PSU Remote Battery Temperature Sensor available at <u>c-tec.com</u> .					
INDICATORS						
• ✓ (Amber Stead		dy LED) - The Supply Output (CONN5) is healthy and within range				
		dy LED) - A fault is present on the PSU				
		ED) - A fault with an auxiliary unit (user-definable), 20 to 30 V, 3.5 to 7 mA.				
2 x Power Supply PCB LEDs: Hazardous Voltages Present (Red Steady LED) PSU Status (Amber Flashing LED), see Table 1 - PSU Status LED (Fig.1)						
FUSES			PHYSICAL			
Mains fuse (E1): T1AH2	250 V, 20 mm ceramic (T = Time Delay,		Dimensions:	404 mm (W) x 404 mm (H) x 110 mm (D)		
	Breaking Capacity))	Weight / Construction:	5 kg (without batteries) / Metal lid and base		
	use (F2): 3 A MINI® automotive blade fuse		Enclosure finish:	RAL7035 textured		
Battery fuse (F2): 3 A MINI		enuse				
Battery fuse (F2): 3 A MINI				-		
FITMENT & OPERATING CON Five mounting holes are pro must be considered when ch has an IP30 rating (to EN 605	DITIONS vided for Ø4-5 mm oosing screw fixing 529) and is designed utside the enclosur	CSK screws. Mount ≤, gs. For compliance wit d for indoor use only .	h EN 54-4 the PSU must be The components are select	Vall condition, construction and in-service weigh e closely coupled with the CIE. The PSU enclosure ed to operate within their specification when the IEC 721-3-3. Temperature range: -10°C to +40°C		

Table 4 - Technical Specification

VdC Approval Na + C219022	LPCB Certificate No.: 176p						
VdS Approval No.: G218033	LPCB Certificate No.: 176p	OKCA Certificate No.:	0832-0KCA-CPR-F1068				
Declaration of Performance: DOP0000062	CPR Certificate No.: 2831-CP	R-F2285	EN 54-4:1997 + A1:2002 + A2:2006				

E&OE. No responsibility can be accepted by the manufacturer or distributors of these power supplies for any misinterpretation of this instruction, or for the compliance of the system as a whole. The manufacturers policy is one of continuous improvement and we reserve the right to make changes to product specifications at our discretion and without prior notice.



Manufacturer: Computionics Limited (C-TEC), Challenge Way, Martland Park, Wigan, Lancashire WN5 0LD. <u>www.c-tec.com</u> Niederlassung Deutschland: C-TEC Germany Limited, Virchowstr. 32, D-33332 Gütersloh. <u>www.c-tec-germany.de</u>

